



AIRMAX

Installation Instructions

(2003 Plymouth PT Cruiser 2.4L Turbo Part # 32450)

Important! Read all instructions before you begin installation.

1. Disconnect negative battery post from battery. -10mm
2. Loosen both clamps on the air inlet bellows. Pull up on red lock tab of the Air Temperature sensor plug. Disconnect the plug from sensor. Disconnect PVC breather hose from cam cover. Remove air inlet bellows from throttle body to air filter housing.
3. Remove the air filter housing by pulling up and away from the engine compartment.
4. Install locating stud into the AirMax housing. Install air filter to AirMax housing.
5. Remove from original air filter housing the support grommet and install support grommet in AirMax bracket.
6. Install the air inlet bellows to throttle body. Install PCV hose to AirMax Housing and reinstall PCV hose to cam cover.
7. Align housing stud to the lower grommet located nearest to the battery. Align the rear support grommet to the stabilizing bracket. Firmly press downward to seat the AirMax housing. Install air inlet bellows to the AirMax housing and tighten both clamps.
8. Reconnect the Air Temperature sensor plug. Reconnect negative battery post.
9. Connect vacuum line to nipple in the elbow of the AirMax housing by the filter.

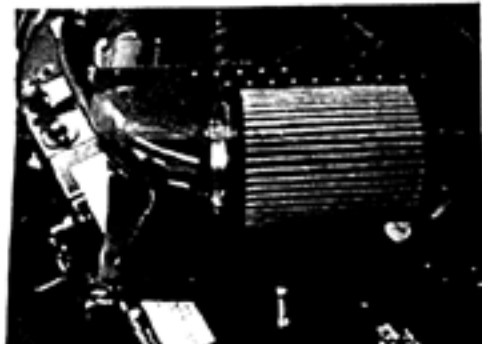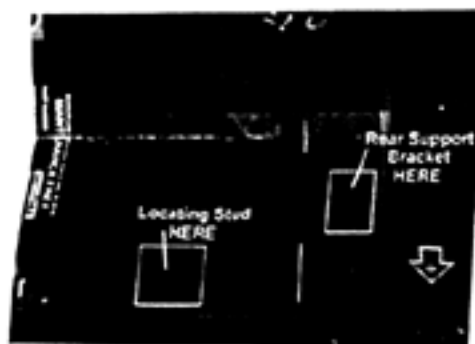

Parts List

- 1 AirMax filter housing
- 1 K&N air filter (RU-2820)
- 2 3/8" locating studs and nuts
- 4 3/8" flat washers

Any questions call: **Street & Performance Electronics**
304 Smokey Lane North Little Rock, Arkansas 72117
Phone: (501) 945-0354 FAX: (501) 945-0370
www.StreetandPerformanceElectronics.com